SLIDING DOOR SYSTEMS: INSTALLATION INSTRUCTIONS GANGING DEVICE (AIR)

V2017.1

ACCESSORIES:



1_ S1500 Ganging device, left



2_ S1500 Ganging device,




3_ S3000 Ganging device, left




4_ S3000 Ganging device, right


 $1_$ When opening one door, the ganging device automatically pulls open the other connected door. TOOLS: Allen key 5mm, 2x wrench 13mm [1/2"]

ASSEMBLY INSTRUCTIONS (Example series \$3000):

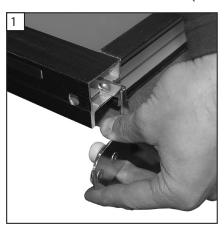

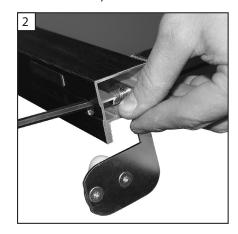




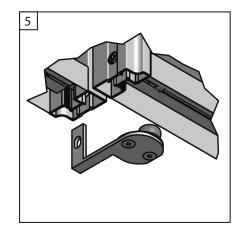


- 3
- _ Please pay attention to see if you require a right or left ganging device.
- _ Screw in the ganging device to the bottom of the stile using a frame screw (fig. 1 and 2).
- _ Attach the ground plate with roller to the floor (fig. 3). (Use spacer if needed as shown in pictures).
- _ The door with the ganging device will first be installed over the ground plate (fig. 4 and 5).



ASSEMBLY

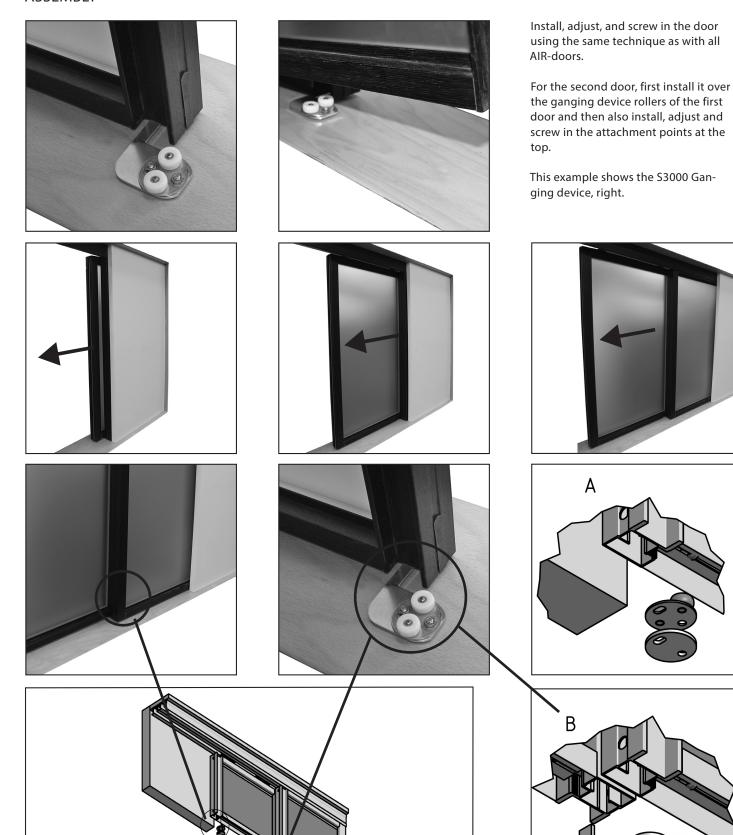


S1500 AIR GANGING DEVICE, LEFT

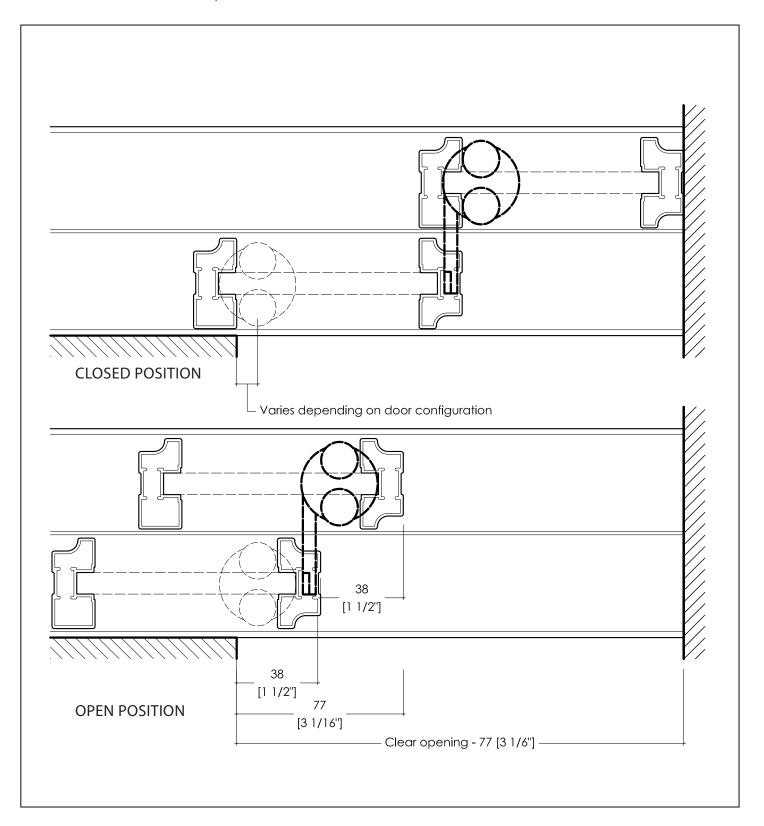




S1500 AIR GANGING DEVICE, RIGHT

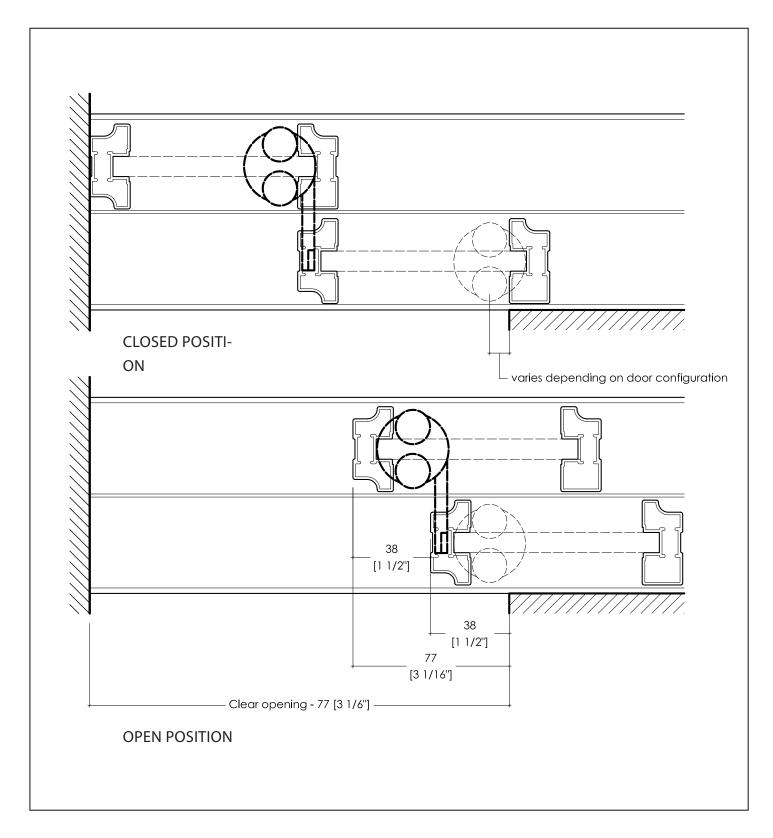


S3000 AIR GANGING DEVICE, LEFT

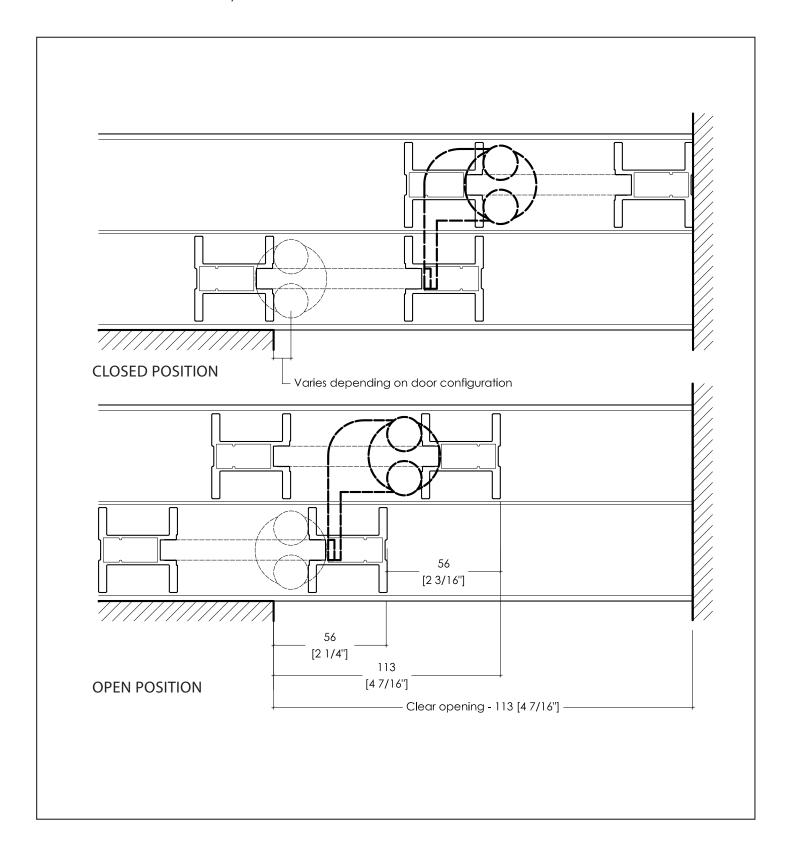





S1500 AIR GANGING DEVICE, LEFT

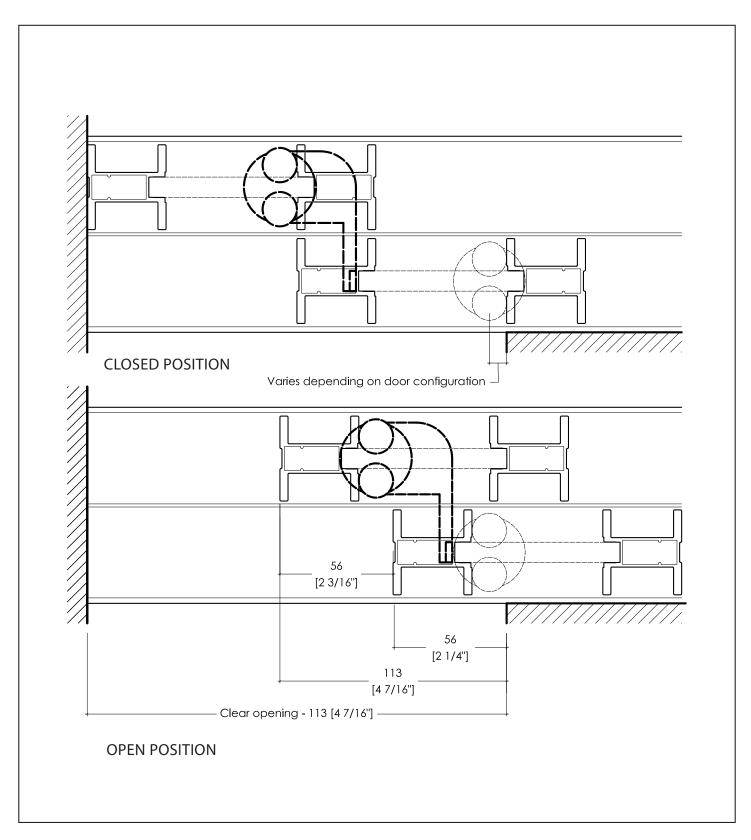

S1500 AIR

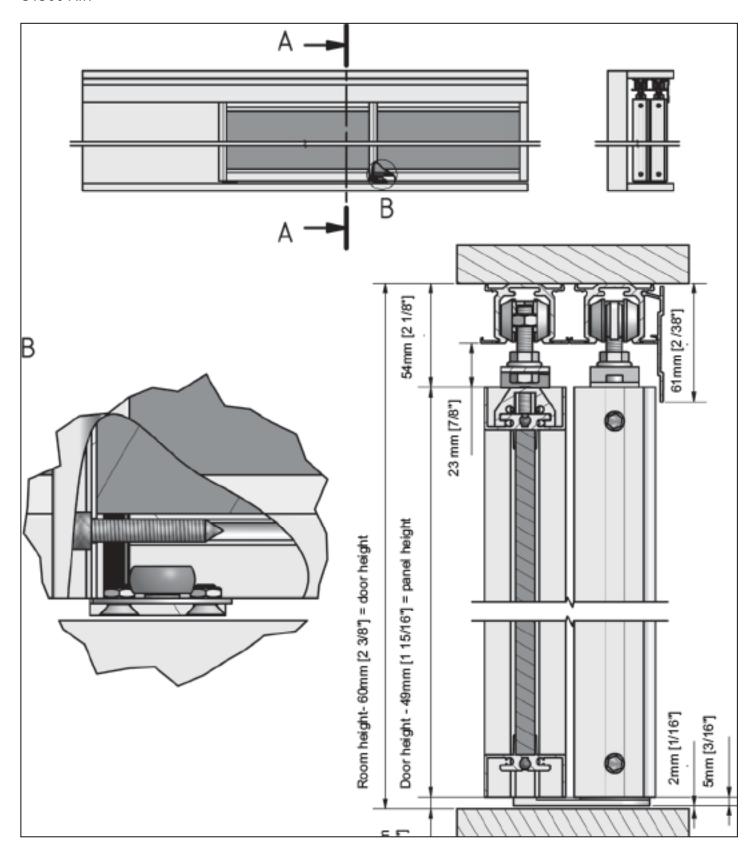


S1500 AIR

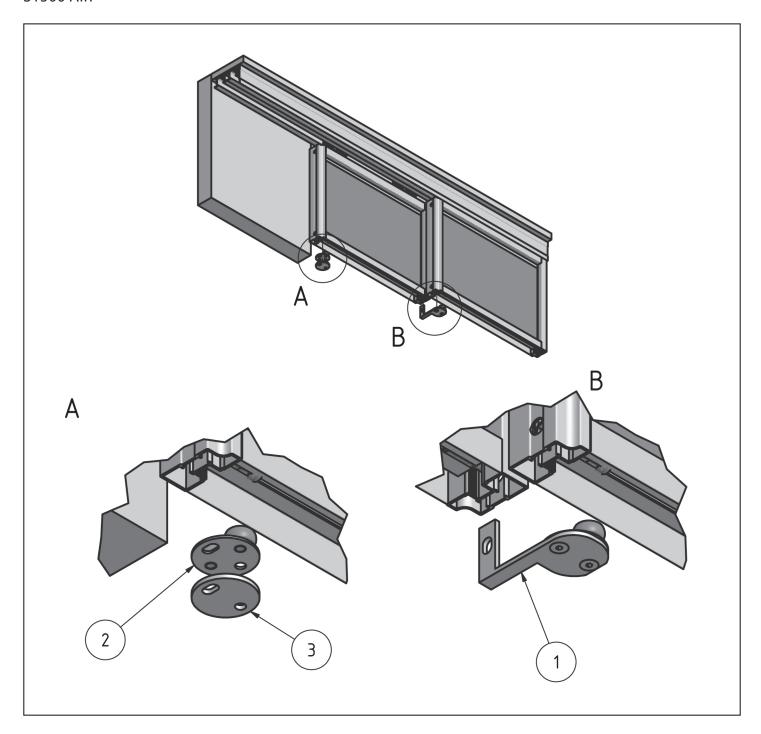


OBJECT	QUANITY	DESCRIPTION
1	1	S1500 Ganging device
2	1	Ground plate with roller
3	1	Ground plate without roller

S3000 AIR

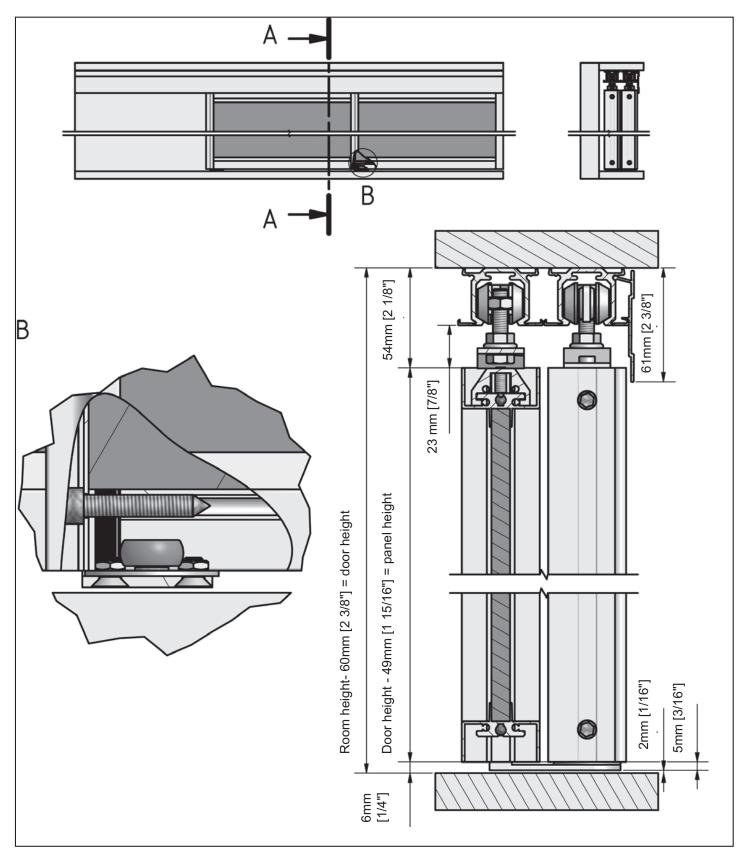

S3000 AIR

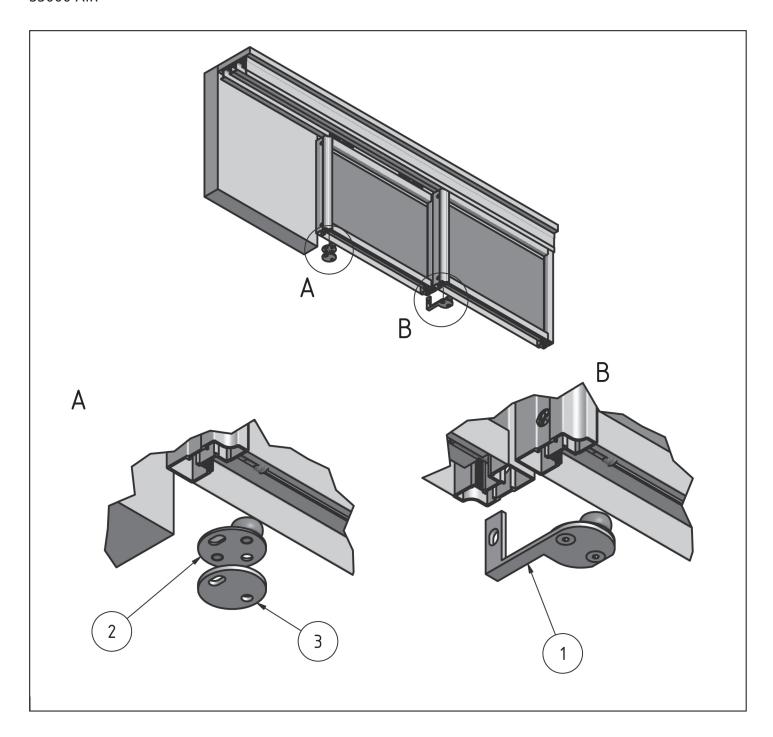

OBJECT	QUANITY	DESCRIPTION
1	1	S3000 Ganging device
2	1	Ground plate with roller
3	1	Ground plate without roller

